 


Replacing PLC connected to UniCloud


If you have a PLC which is connected to UniCloud and needs to be replaced for any reason this guide will give you the steps to replace the PLC in UniCloud

- Log in to your UniCloud Account
- Go to PLC Management tab
- Select (+) symbol to add your new PLC –

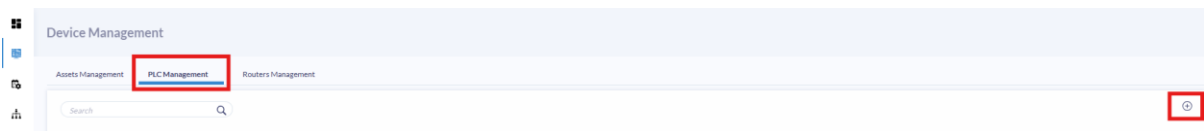


- Enter new PLC serial number select Validate and click 'Add'

- Go to Asset management Tab
- Locate the Asset which is linked to the PLC which is being replaced and click on the status to reveal more info about the asset.
- Select Edit Button

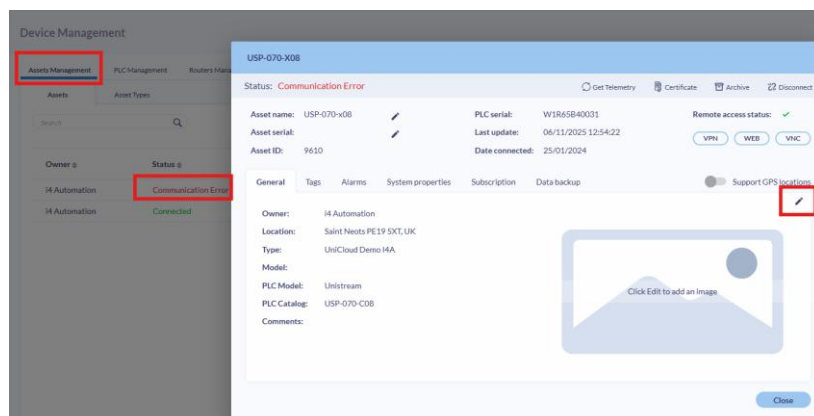

- Disconnect PLC from this Asset and Confirm

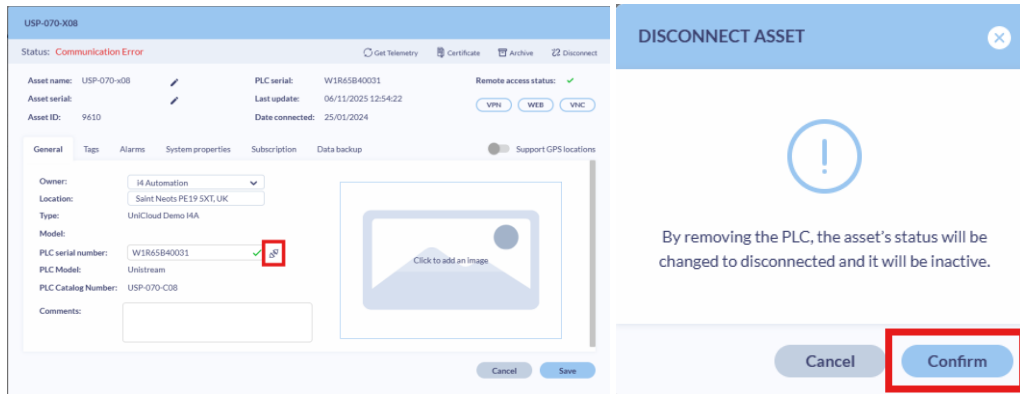

- Enter New PLC Serial Number and Click 'Validate'

PLC serial number:

- Once validated you should see a green tick

PLC serial number:

- Select Save and download new certificate to the new PLC.

You may then have to wait for a few minutes for the new PLC to be available.

Tom Johnson

Nov 2025

i4 Automation Ltd